



Midway



TOY DESIGN

The Joker Campervan


Scale 1:18

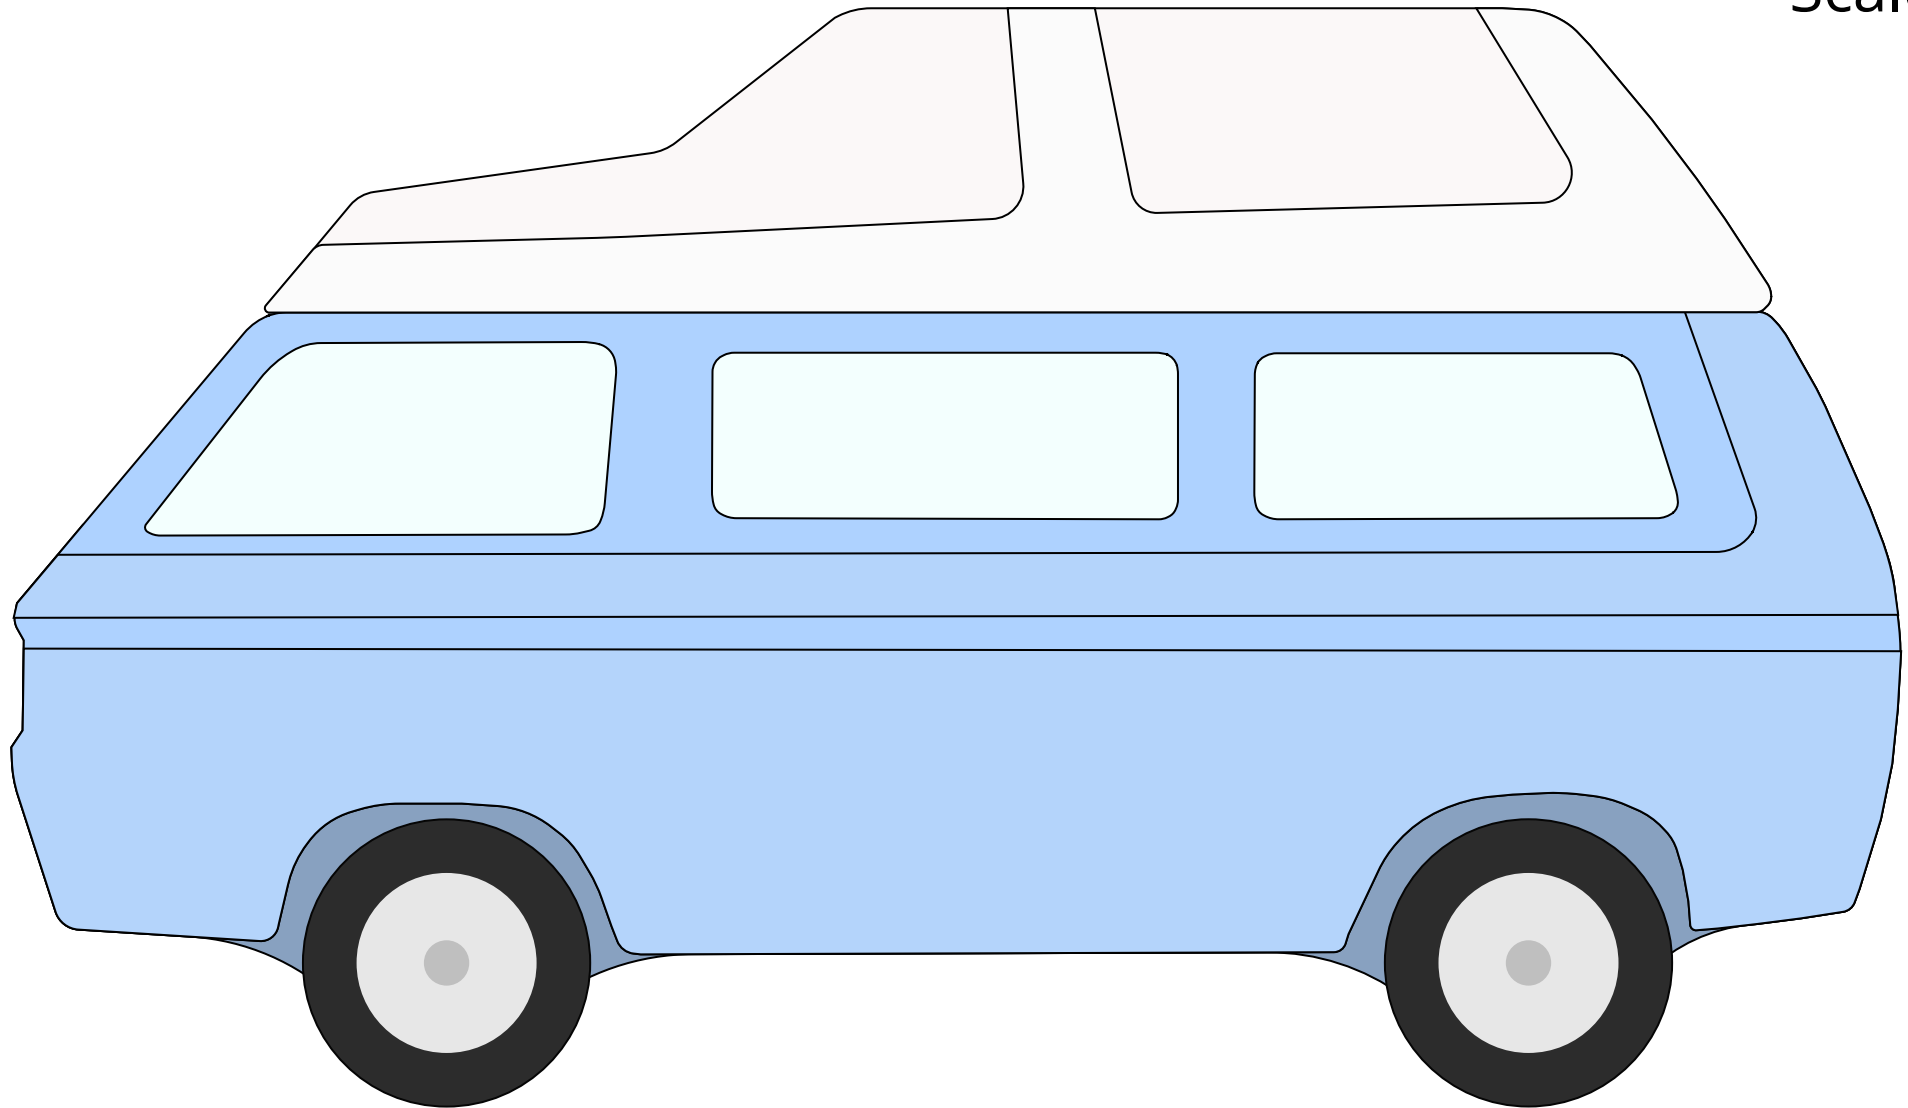

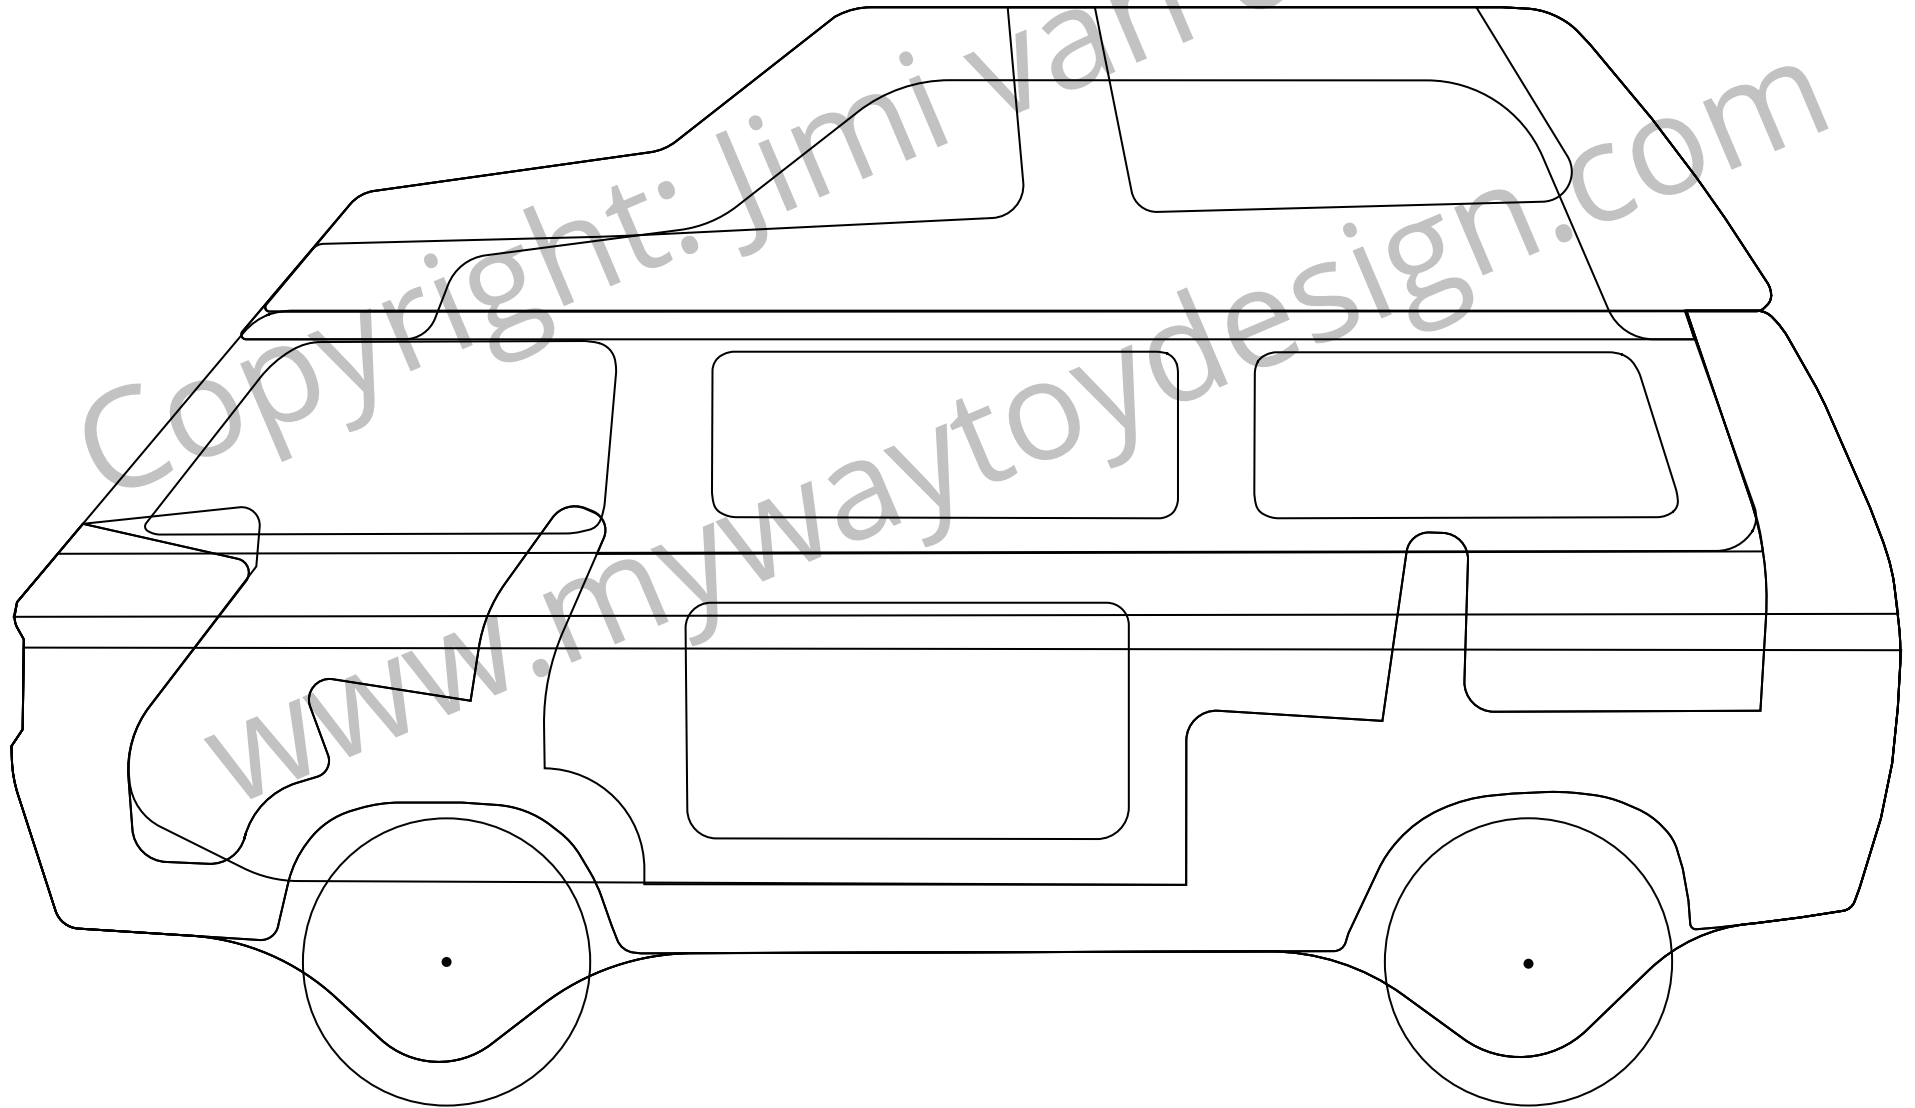

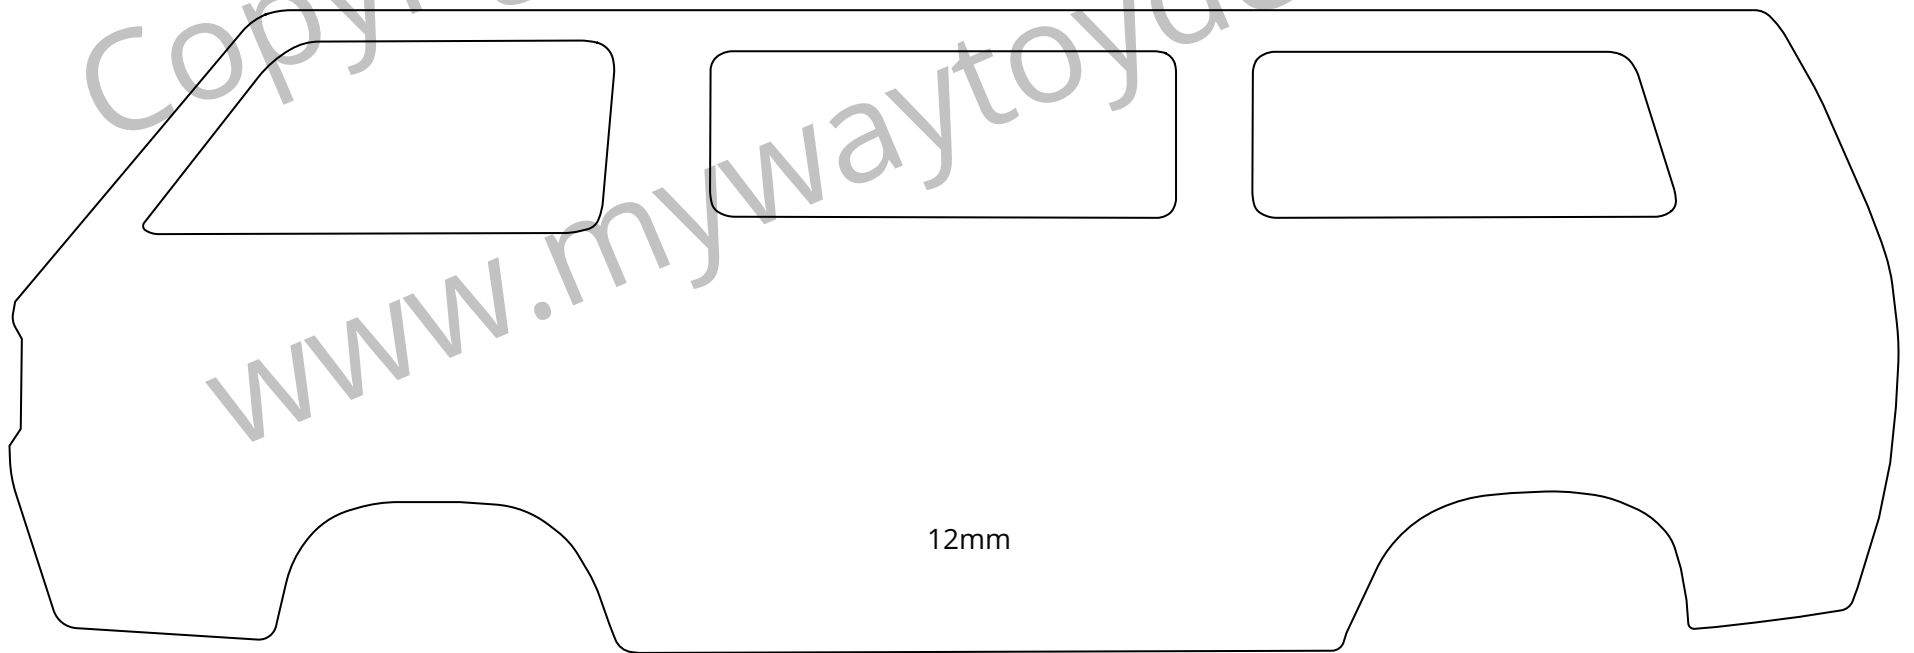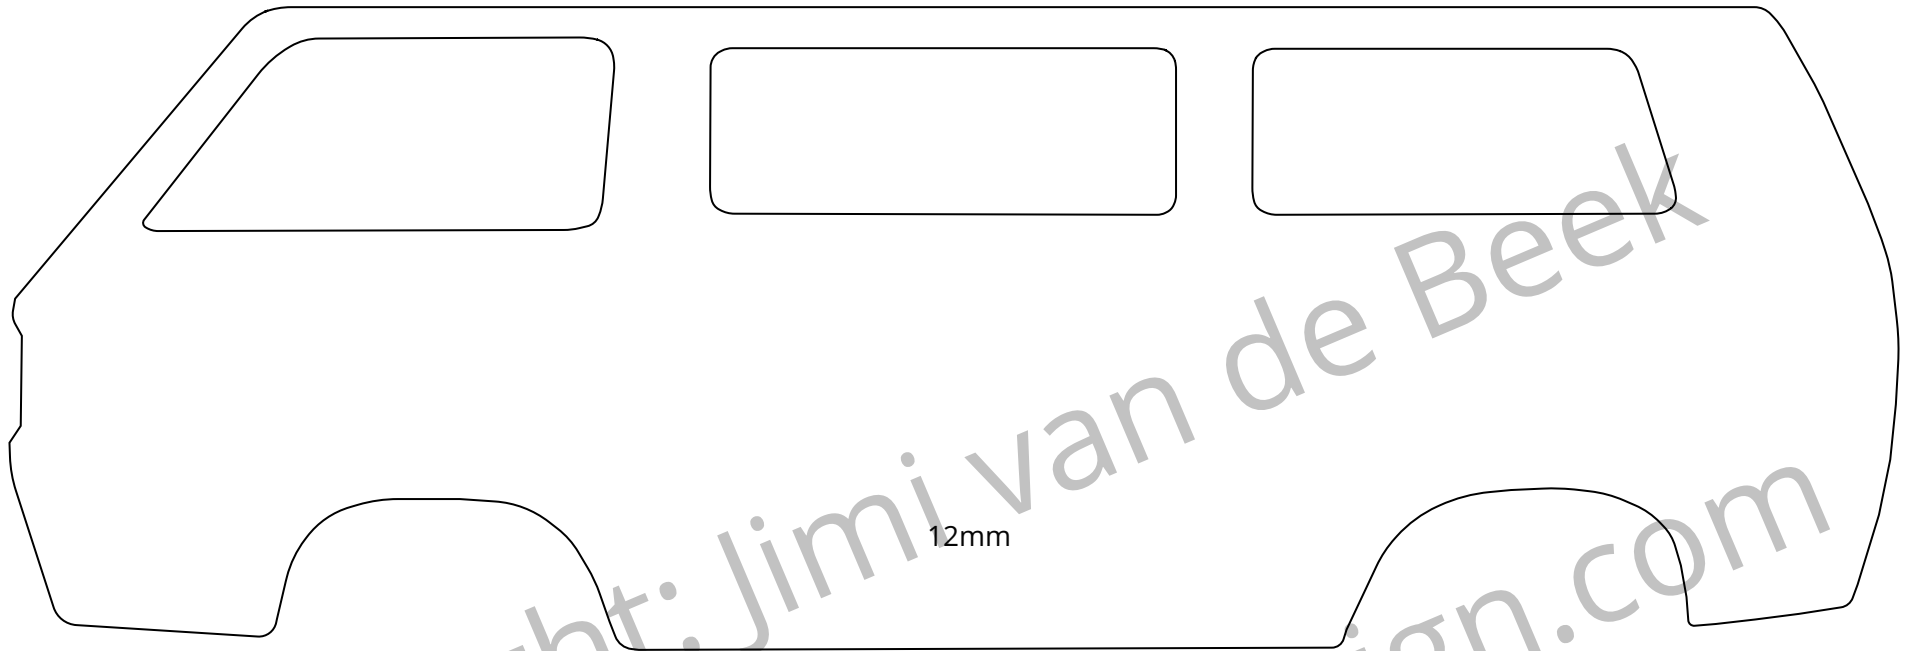

Copyright: Jimi van de Beek
www.mywaytoydesign.com

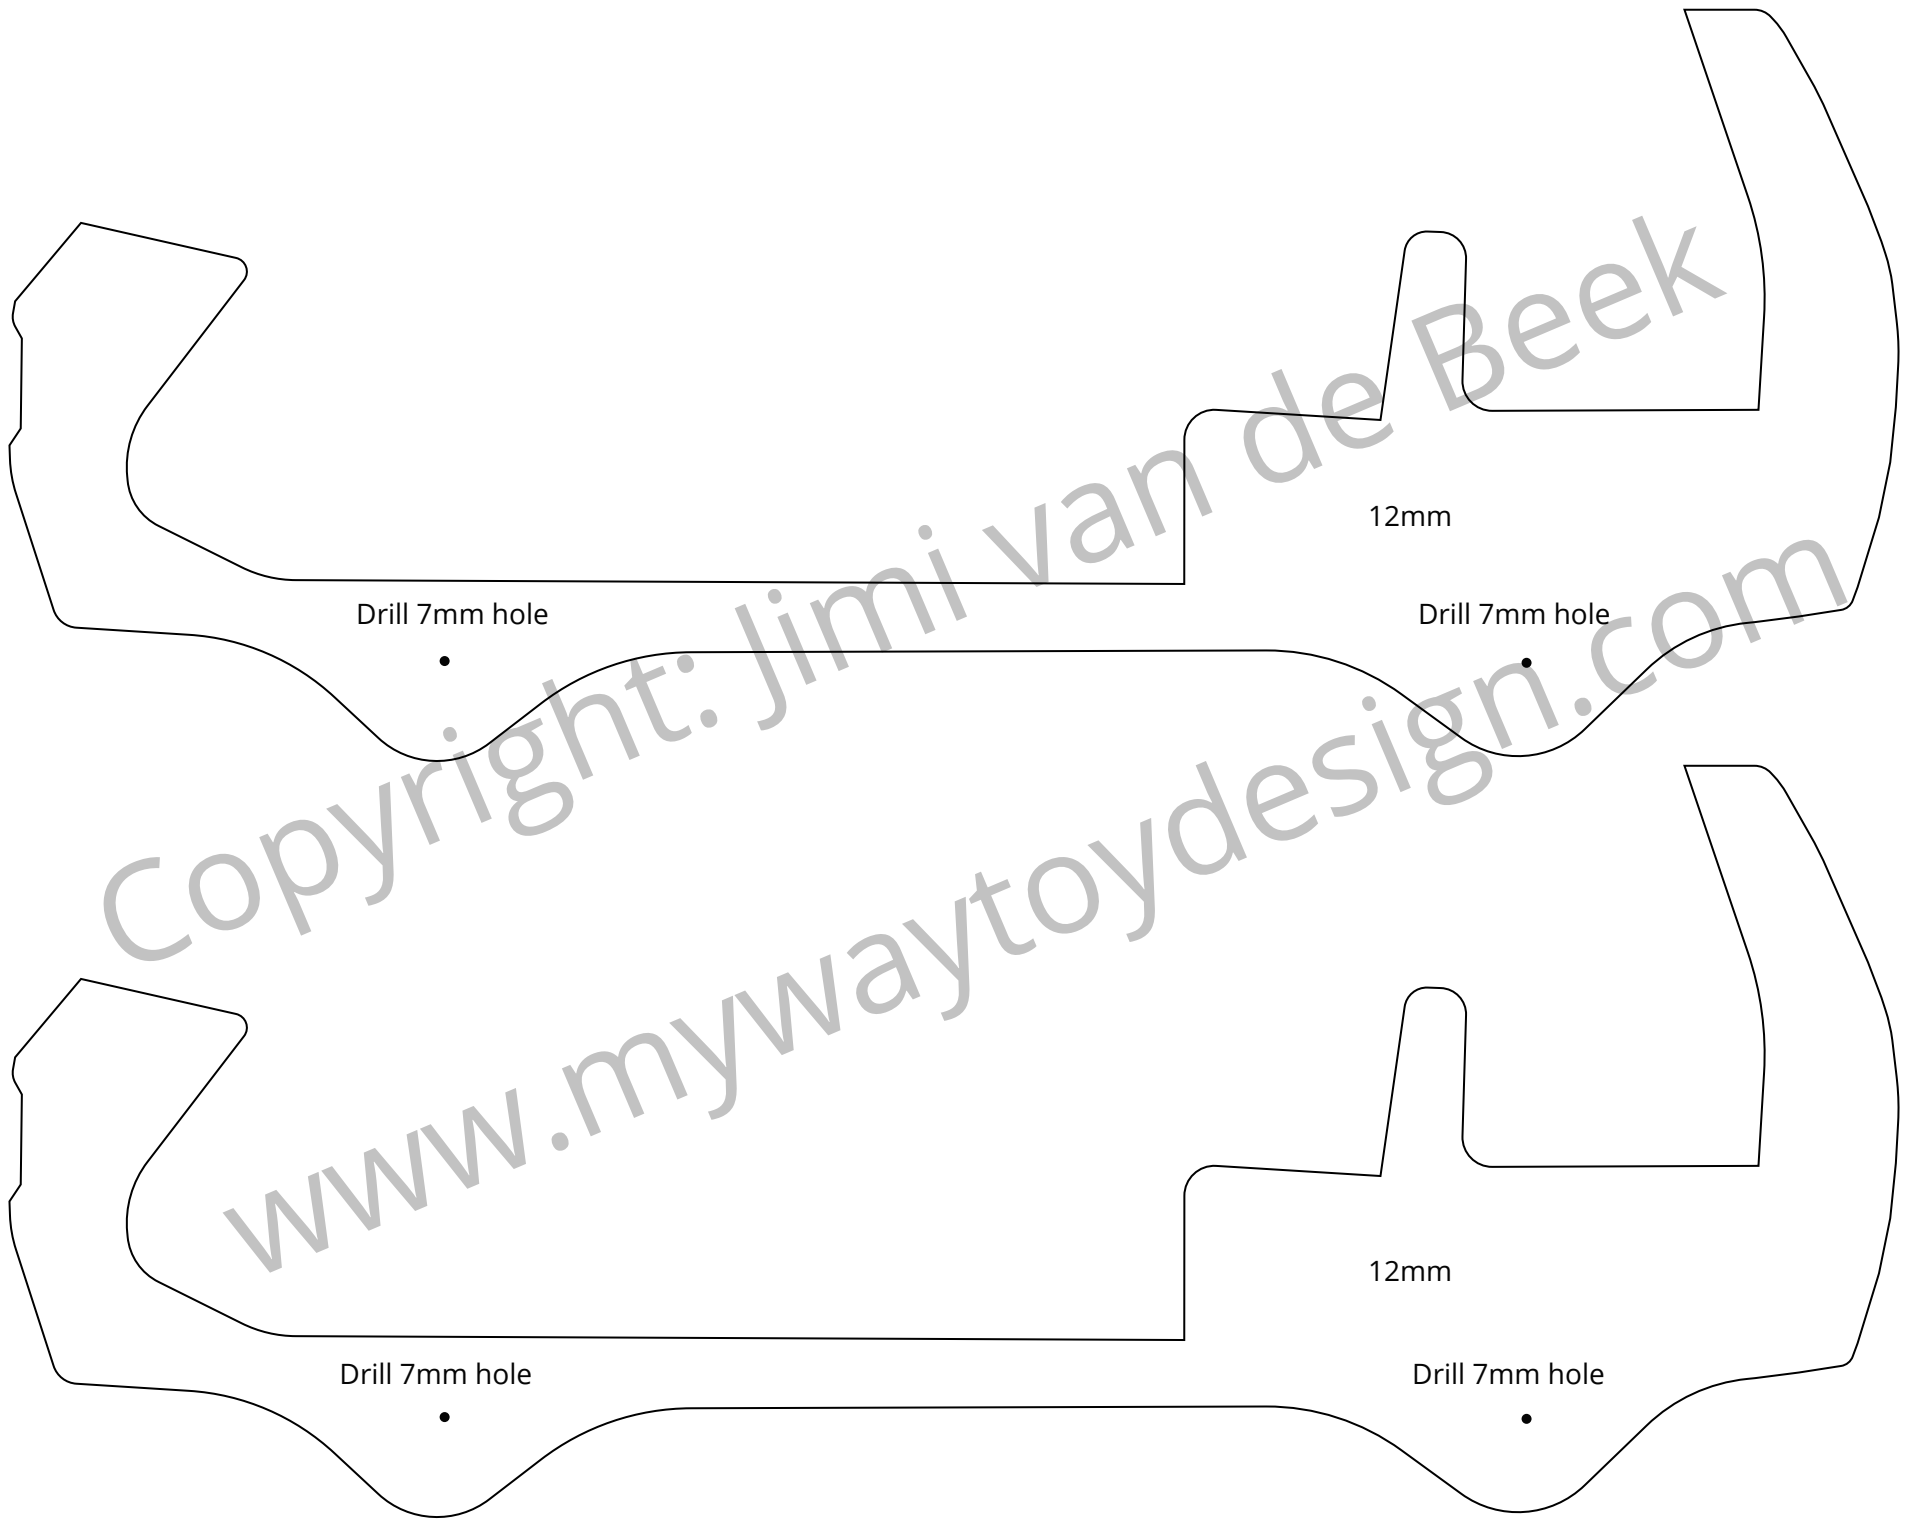




Drill 7mm hole

12mm


Drill 7mm hole



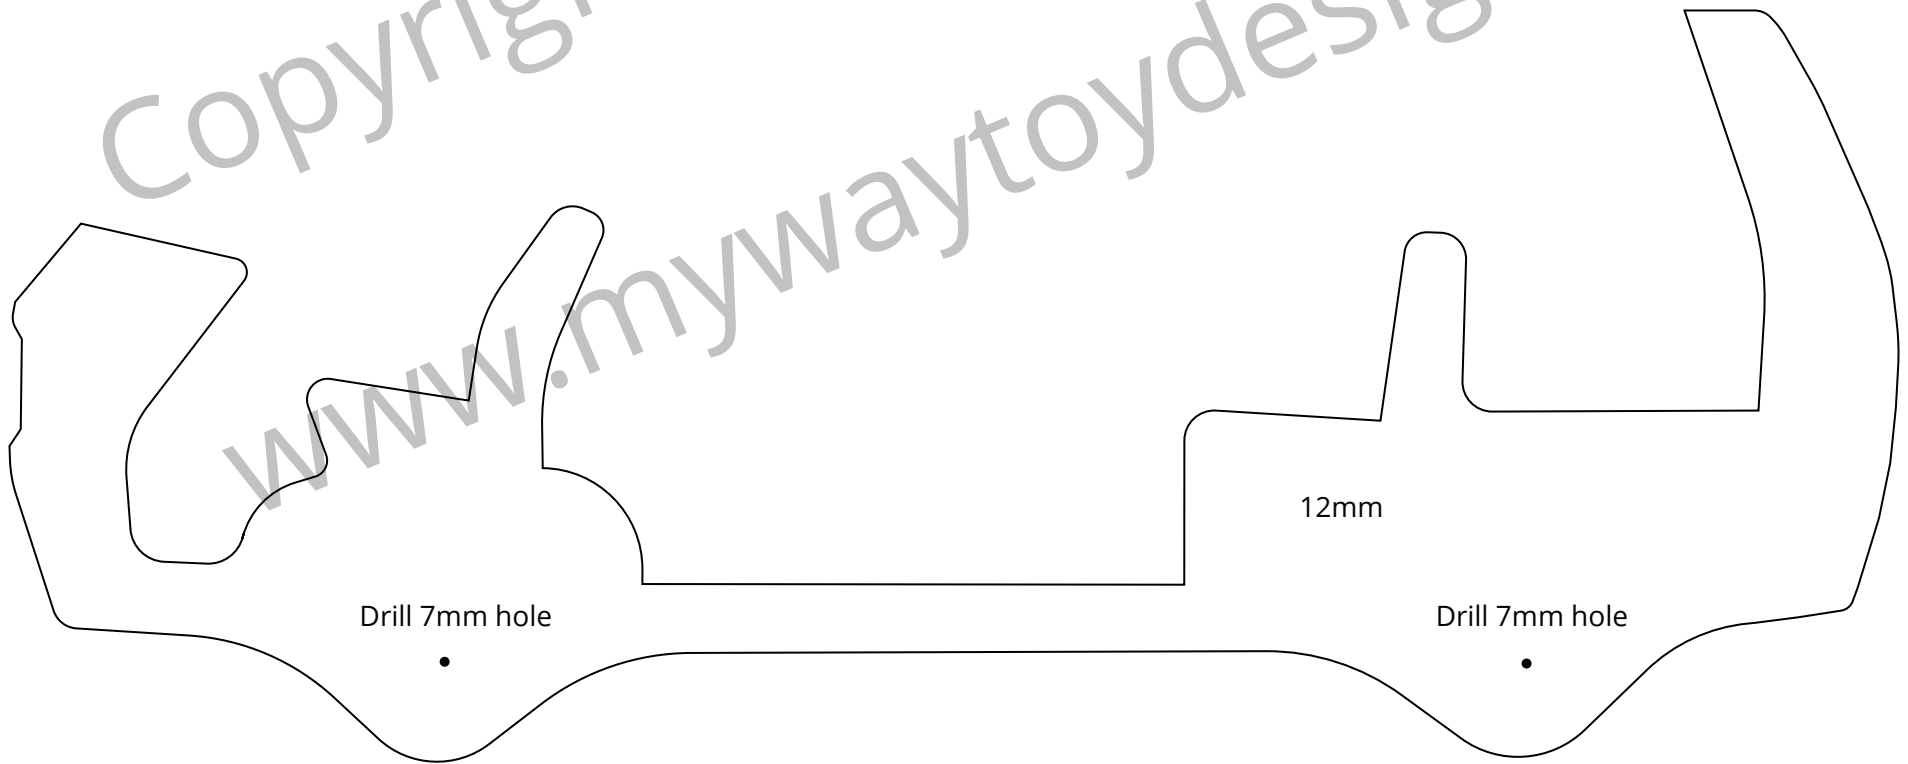


Drill 7mm hole


12mm

Drill 7mm hole

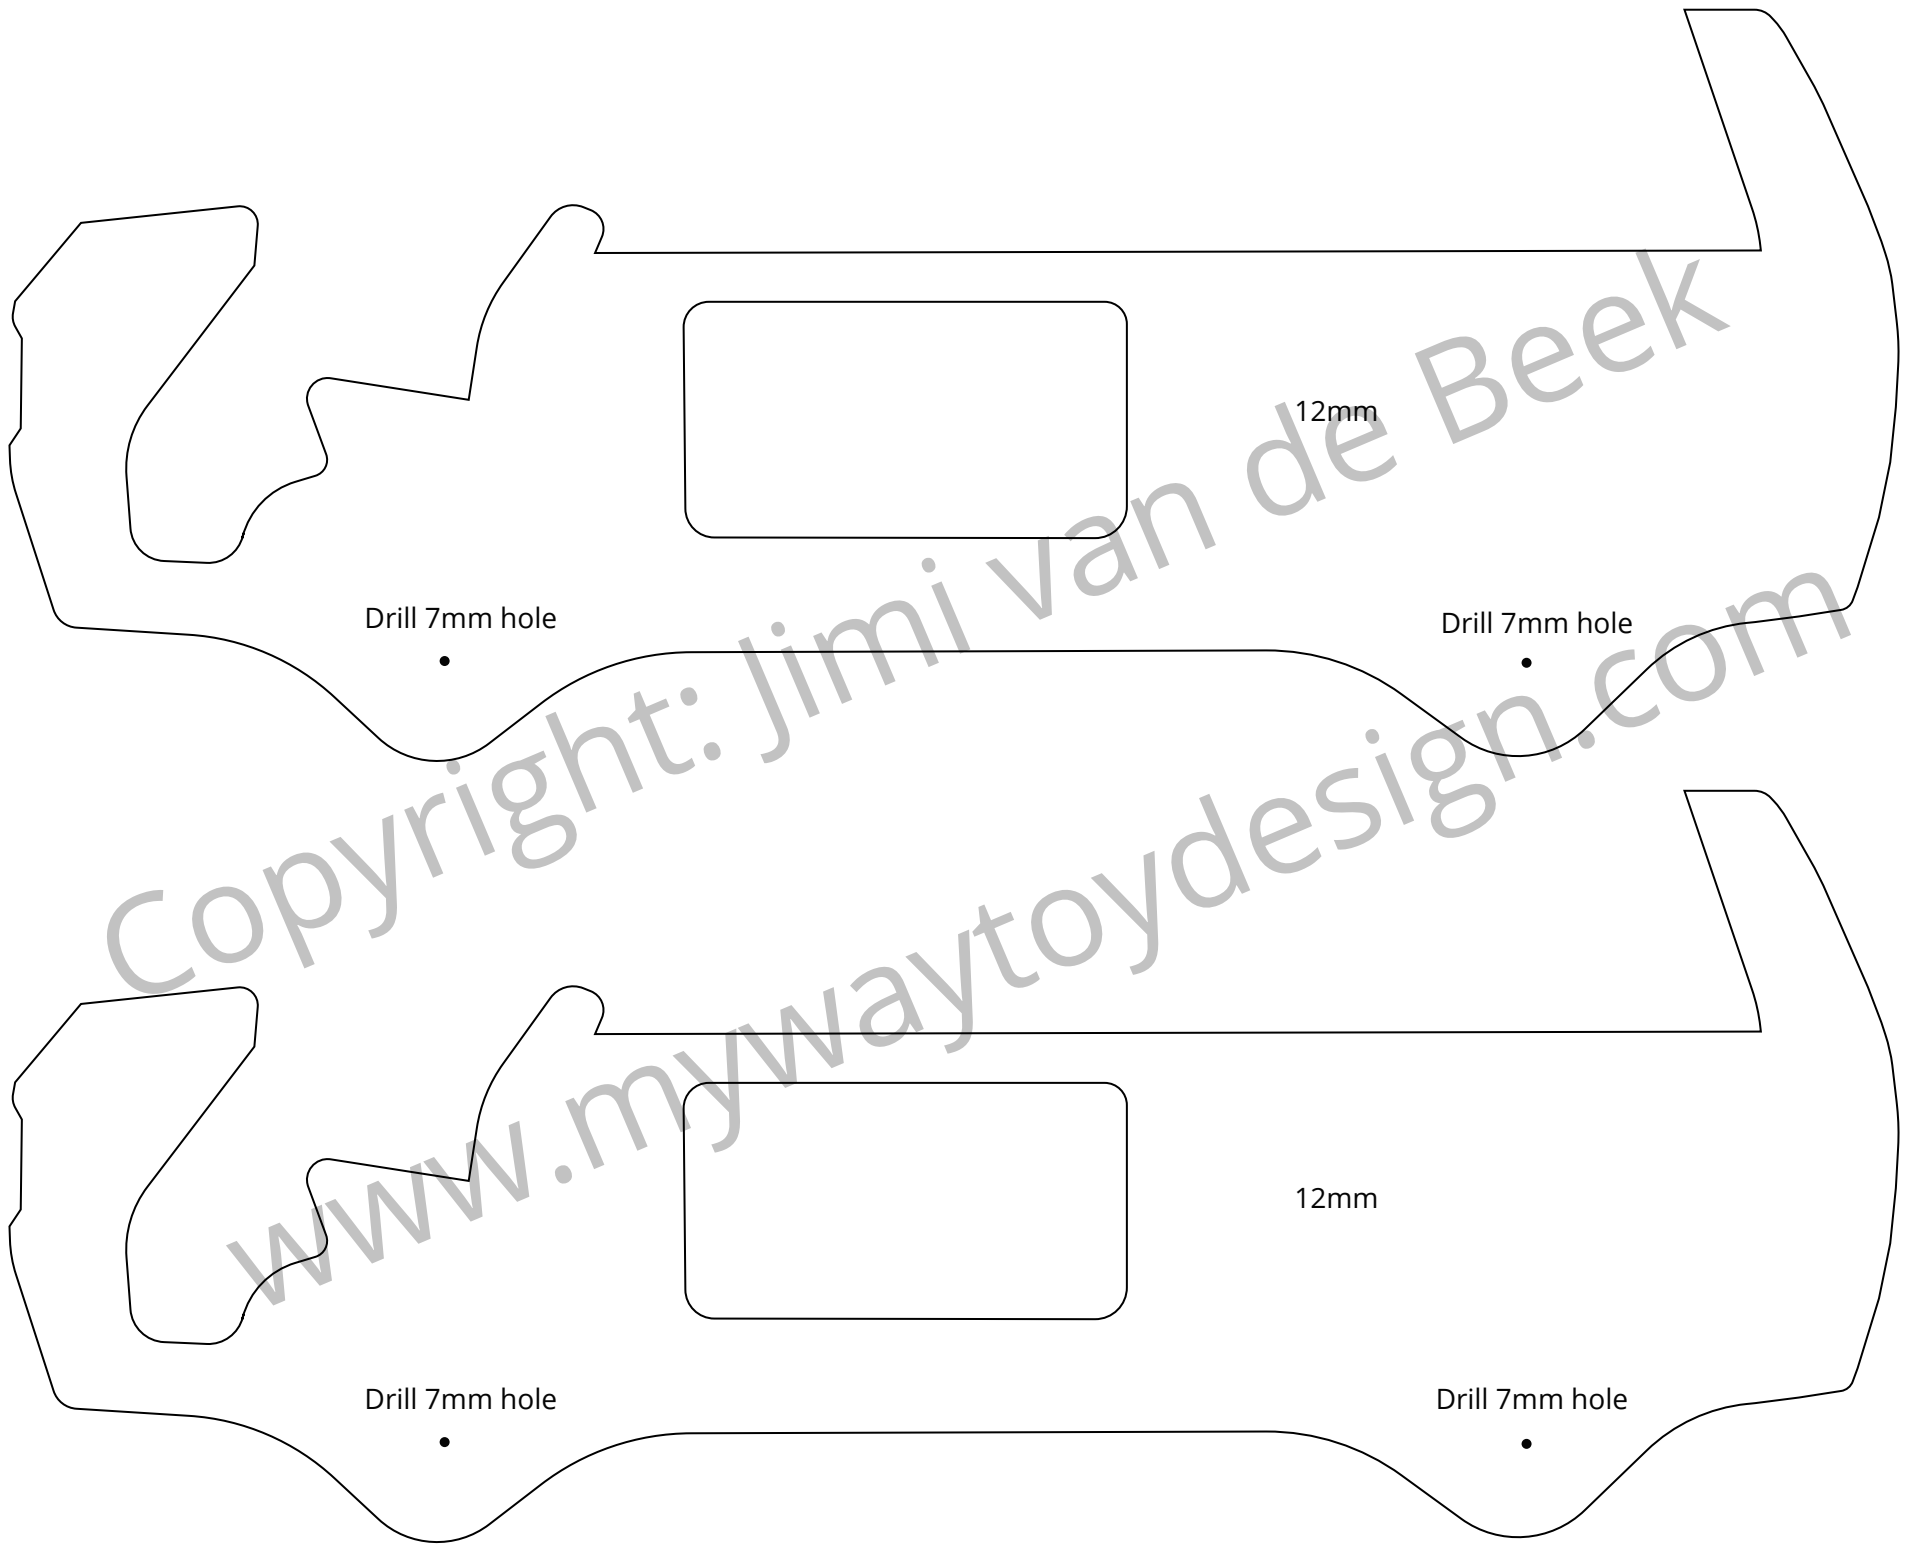


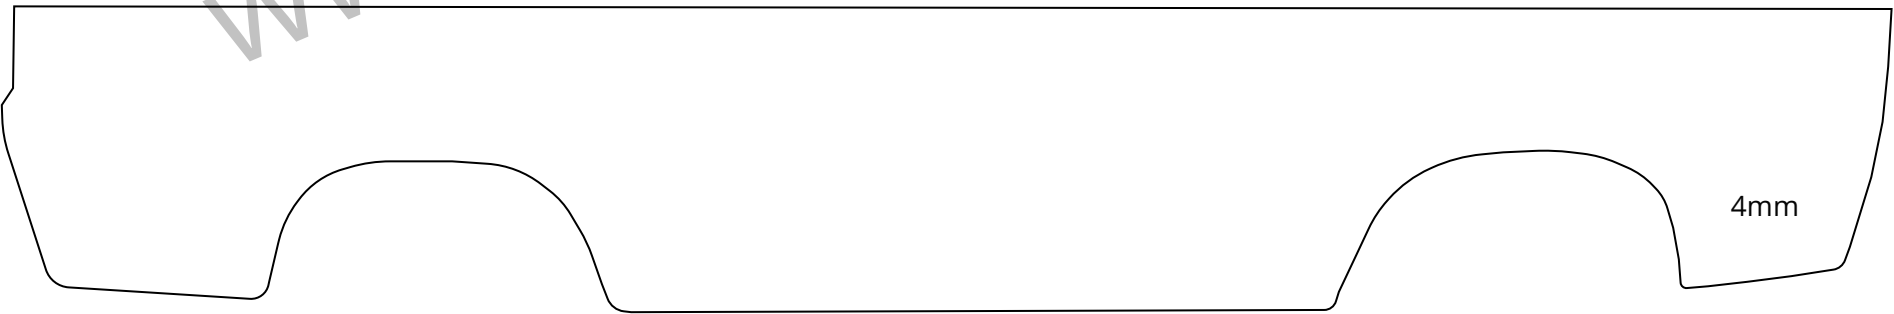
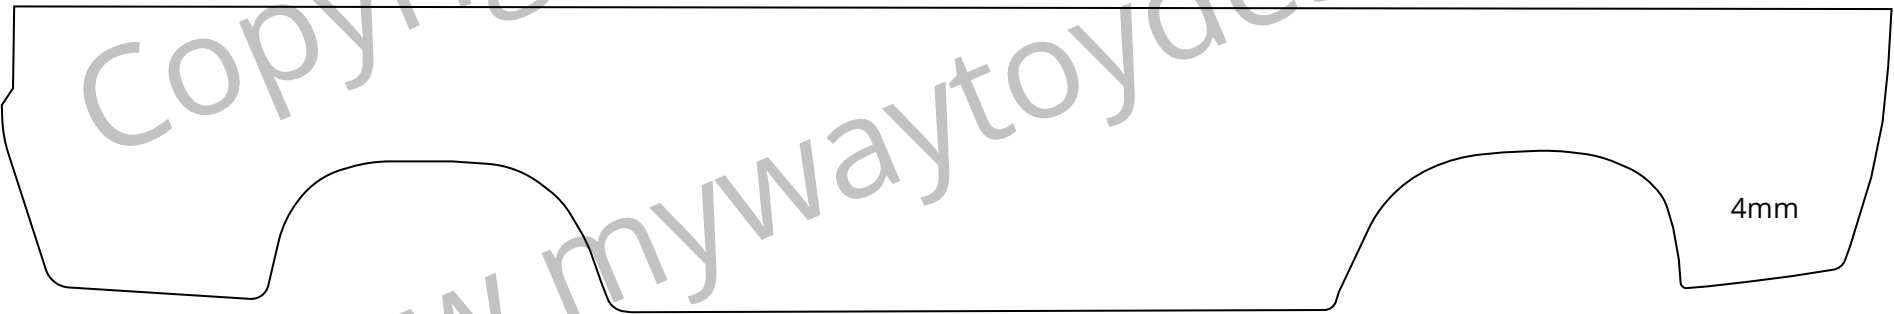
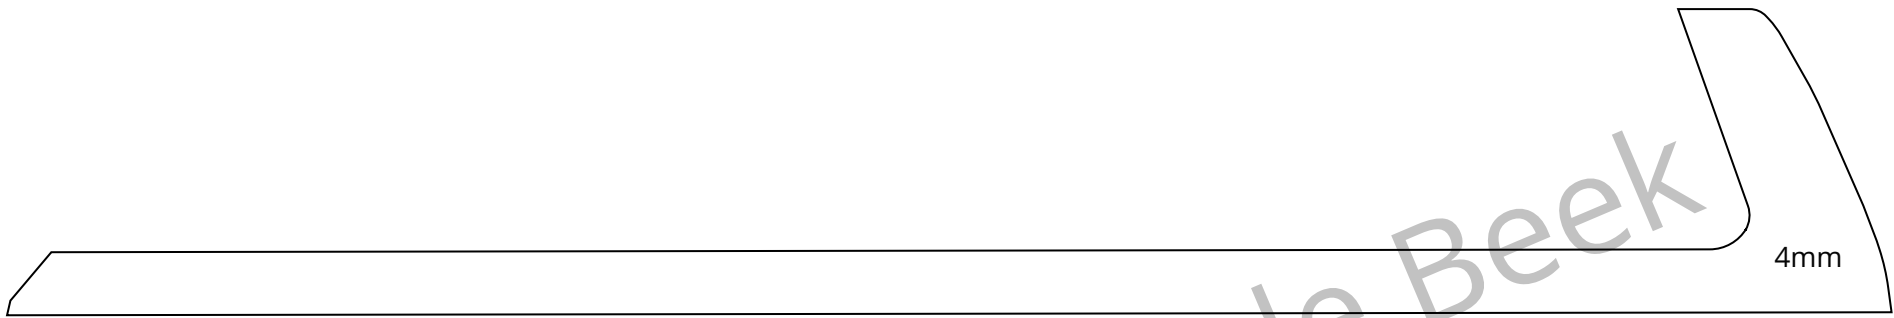




Copyright: Jimi van de Beek
www.mywaytoydesign.com

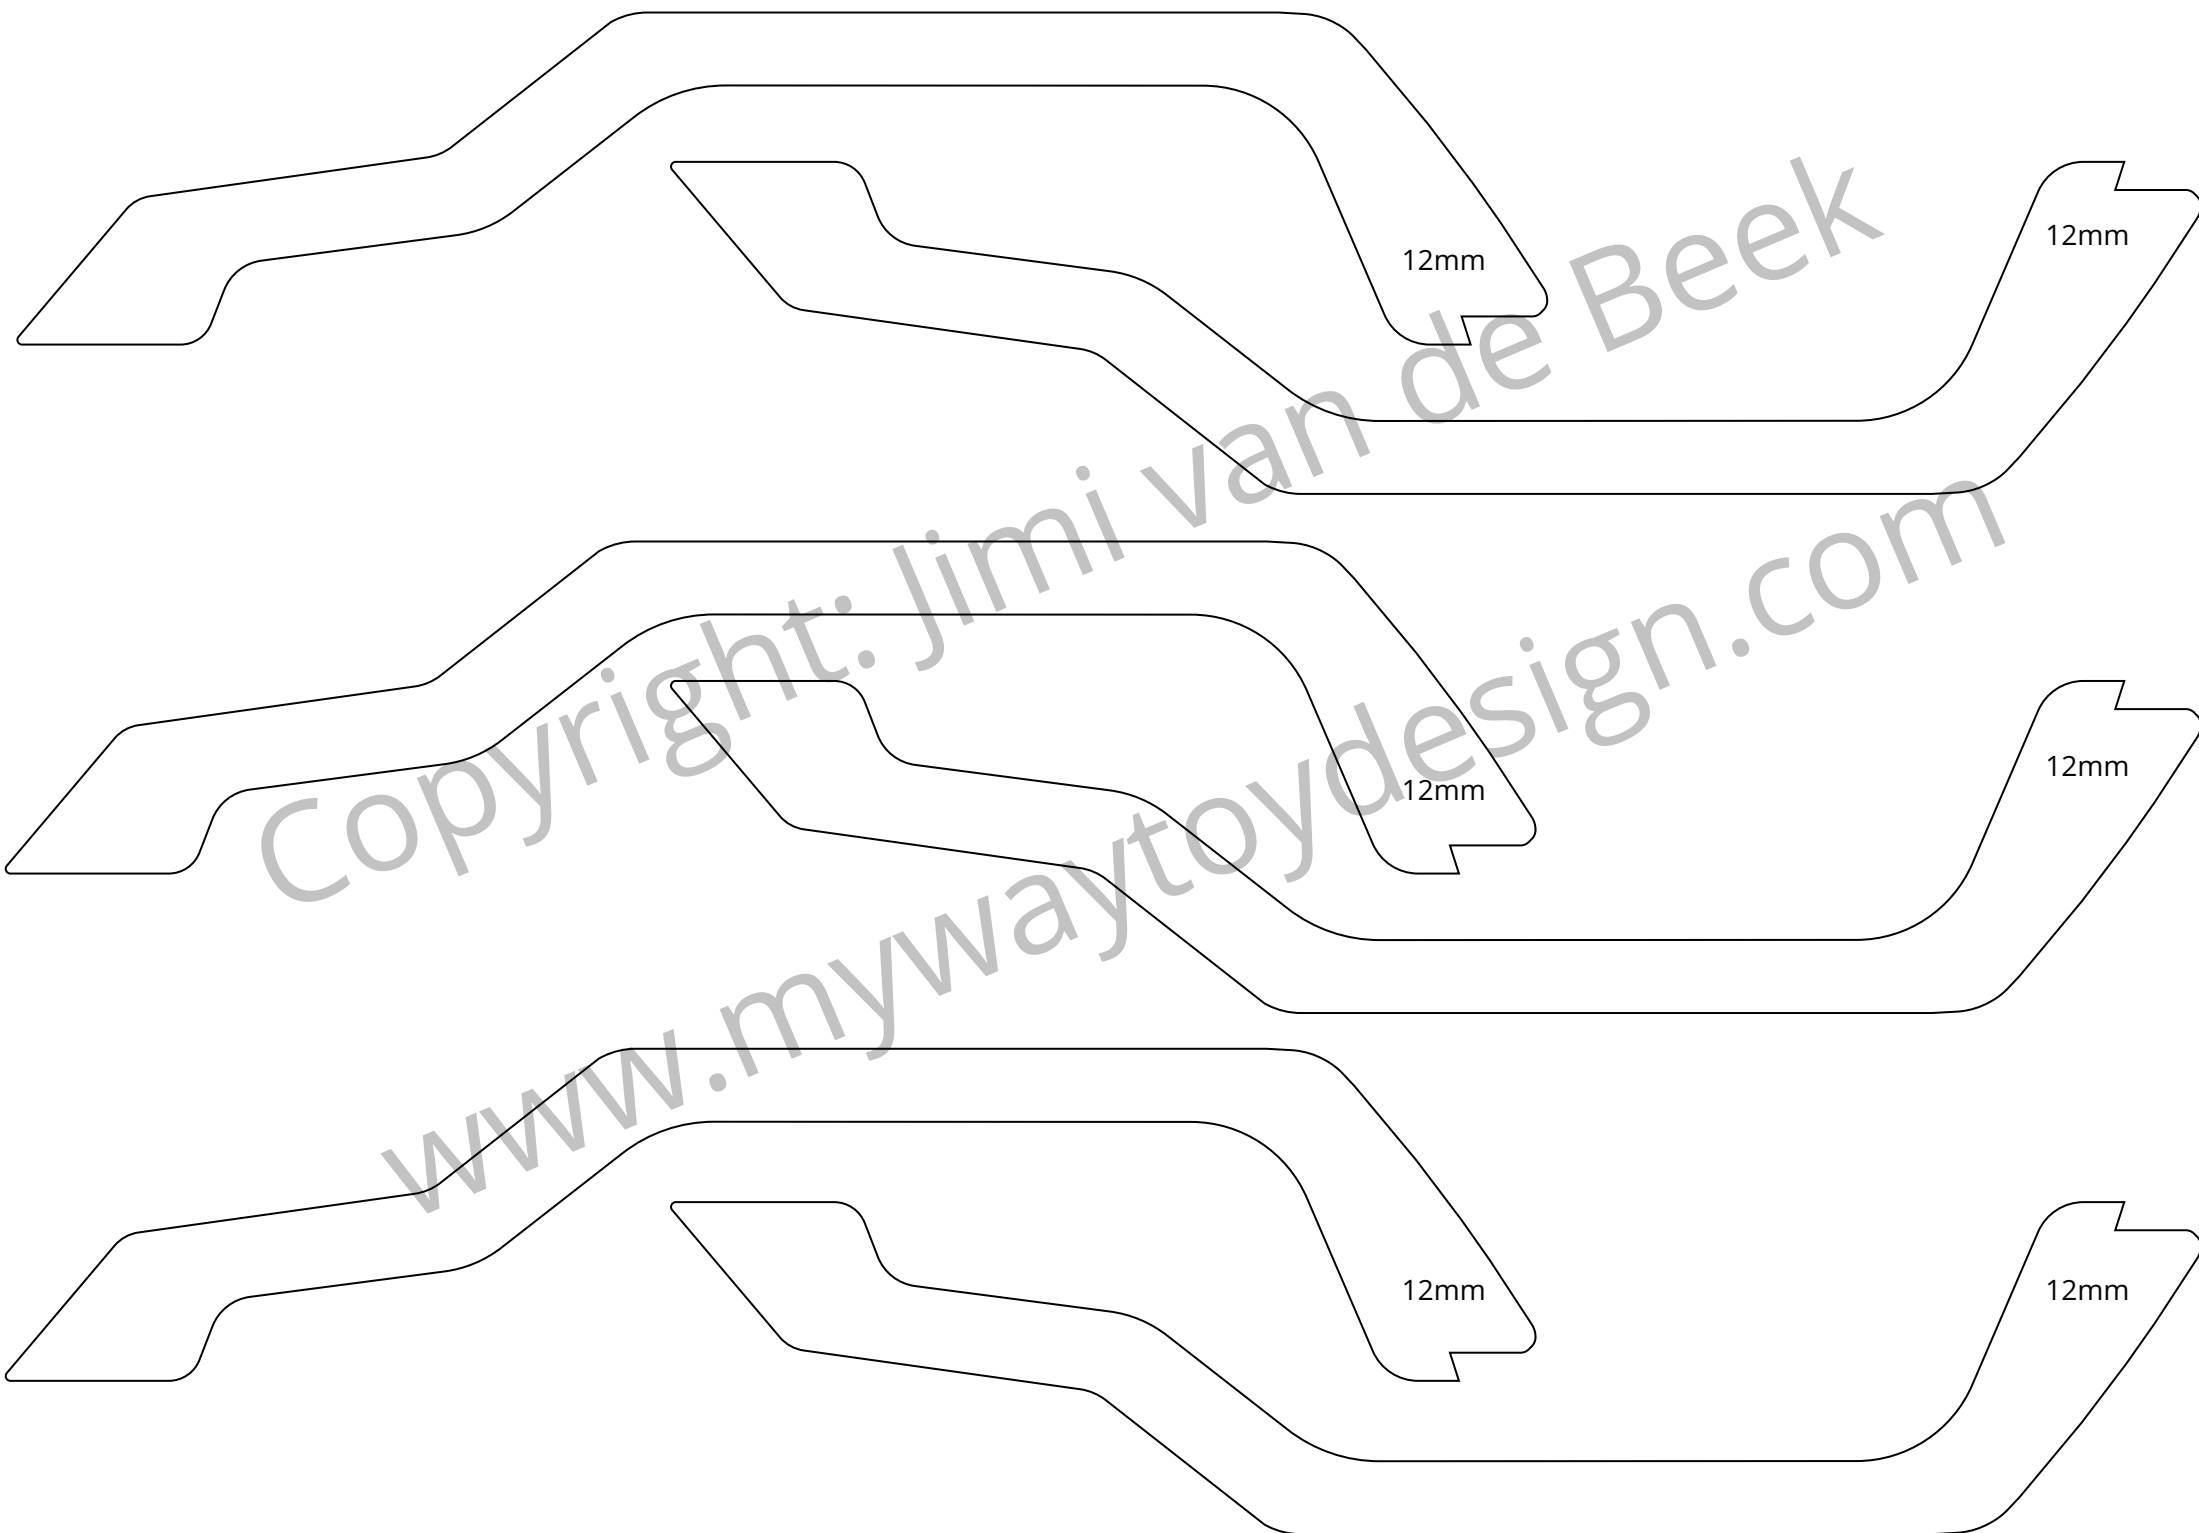

Copyright: Jimi van de Beek
www.mywaytoydesign.com

Copyright: Jimi van de Beek
www.mywaytoydesign.com

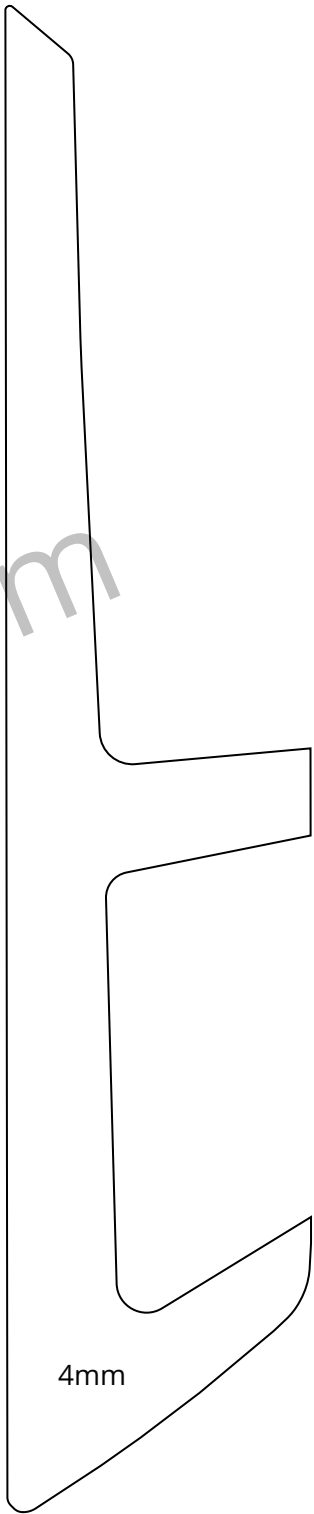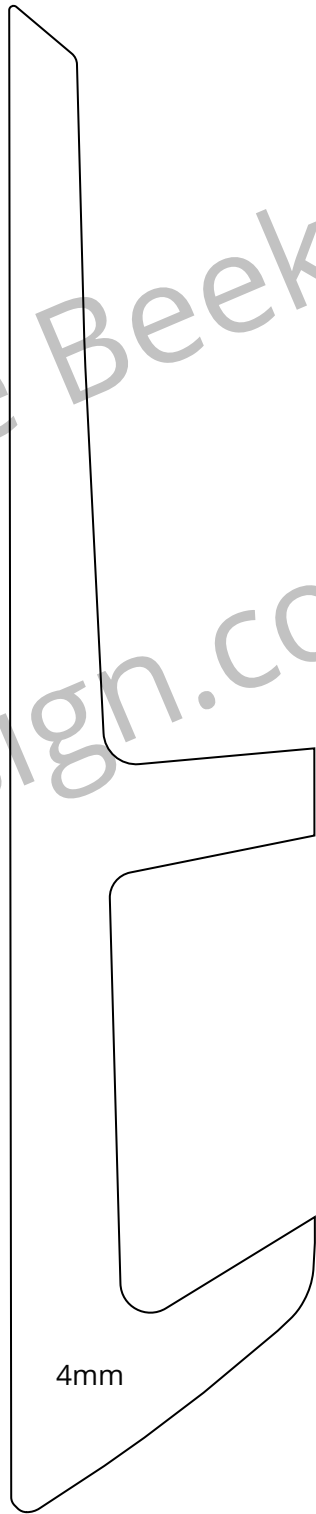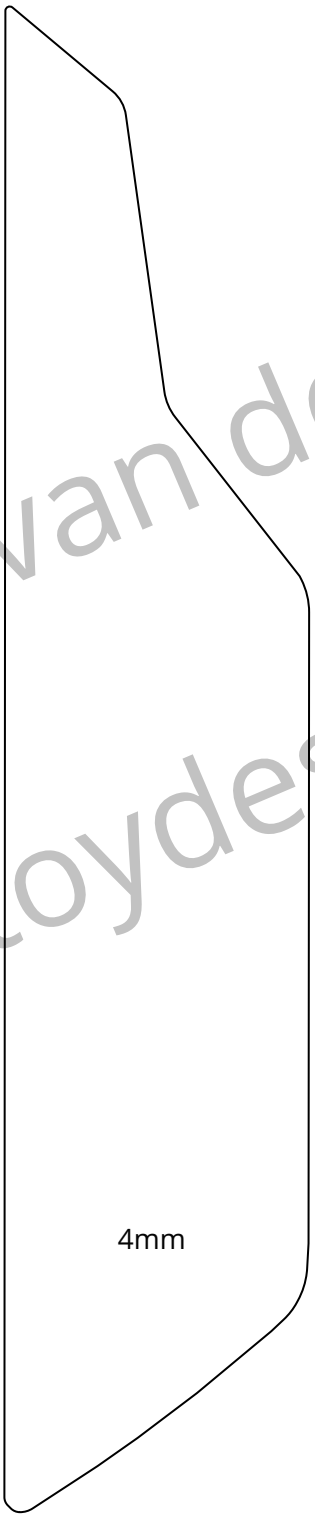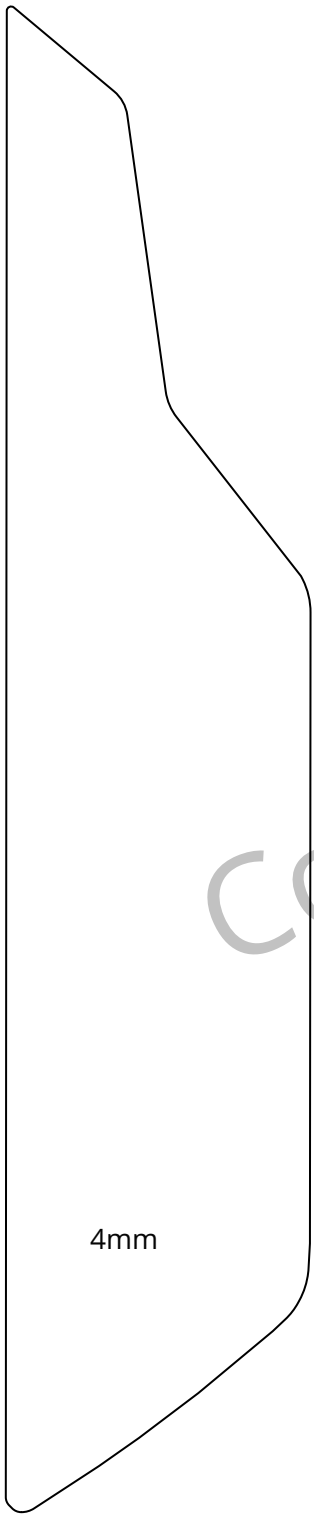

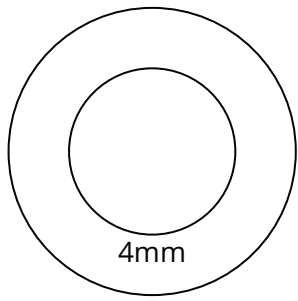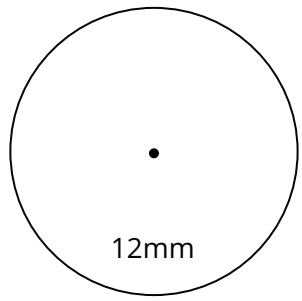

• = Drill a 6mm hole (use 6mm axles)

